


Sustainiac® STEALTH PRO  
 sustainer  
 STRAT® installation  
 PUSH-PULLS  
 01/08

## STRAT #2

OPEN-STYLE  
 OUTPUT JACK


KEEP WIRES AS SHORT AS  
 POSSIBLE. For Strats, place  
 circuit and wires as shown.

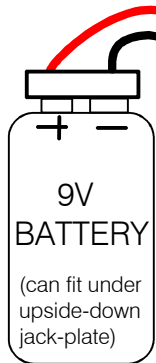

**CAUTION:** Do not solder ground wire to switch body of combination potentiometer/switches. Solder to potentiometer section. Switches have plastic parts inside which will melt!

POTENTIOMETER OR, solder to tab  
 Solder ground connection here.

not here SWITCH

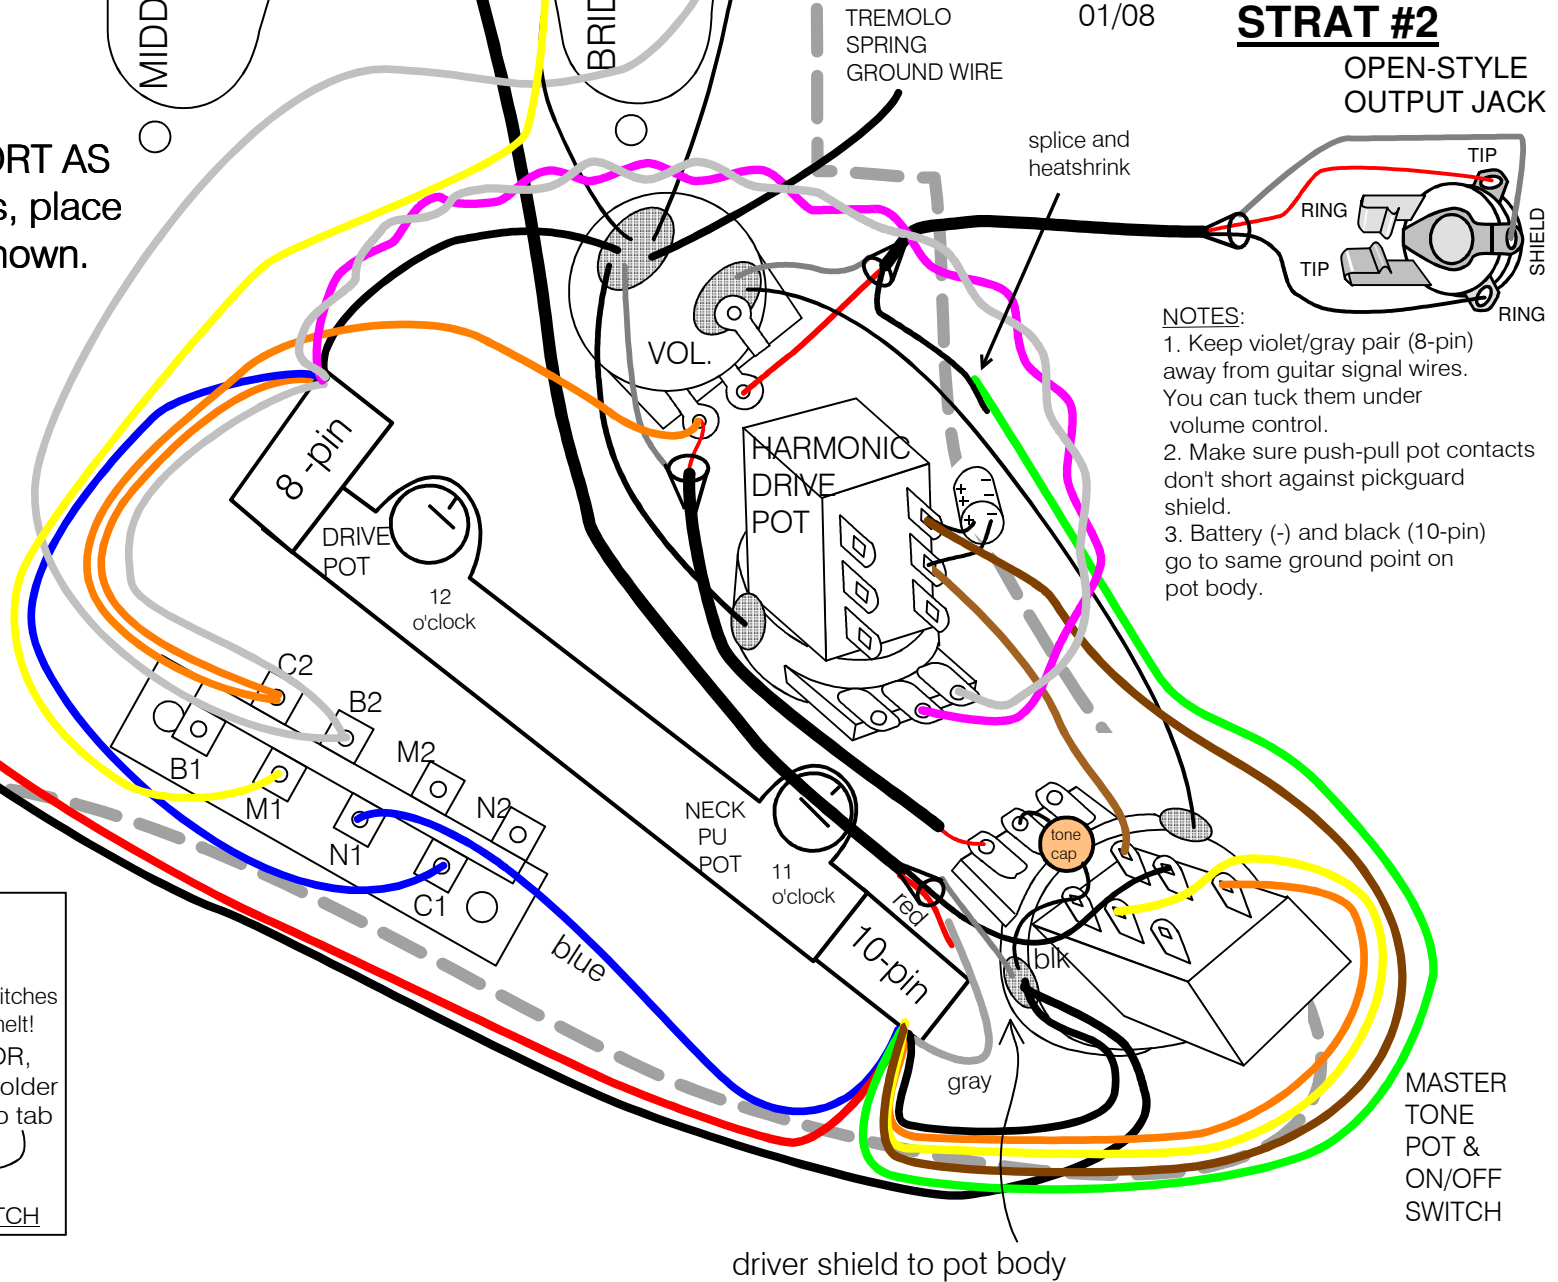

- NOTES:
1. Keep violet/gray pair (8-pin) away from guitar signal wires. You can tuck them under volume control.
  2. Make sure push-pull pot contacts don't short against pickguard shield.
  3. Battery (-) and black (10-pin) go to same ground point on pot body.

driver shield to pot body