


Sustainiac® STEALTH PRO
 sustainer
 STRAT® installation
 PUSH-PULLS
 01/08

STRAT #2

OPEN-STYLE
 OUTPUT JACK


KEEP WIRES AS SHORT AS
 POSSIBLE. For Strats, place
 circuit and wires as shown.

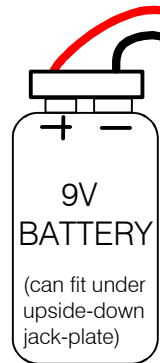

CAUTION: Do not solder ground wire to switch body of combination potentiometer/switches. Solder to potentiometer section. Switches have plastic parts inside which will melt!

POTENTIOMETER OR, solder to tab
 Solder ground connection here.

not here SWITCH

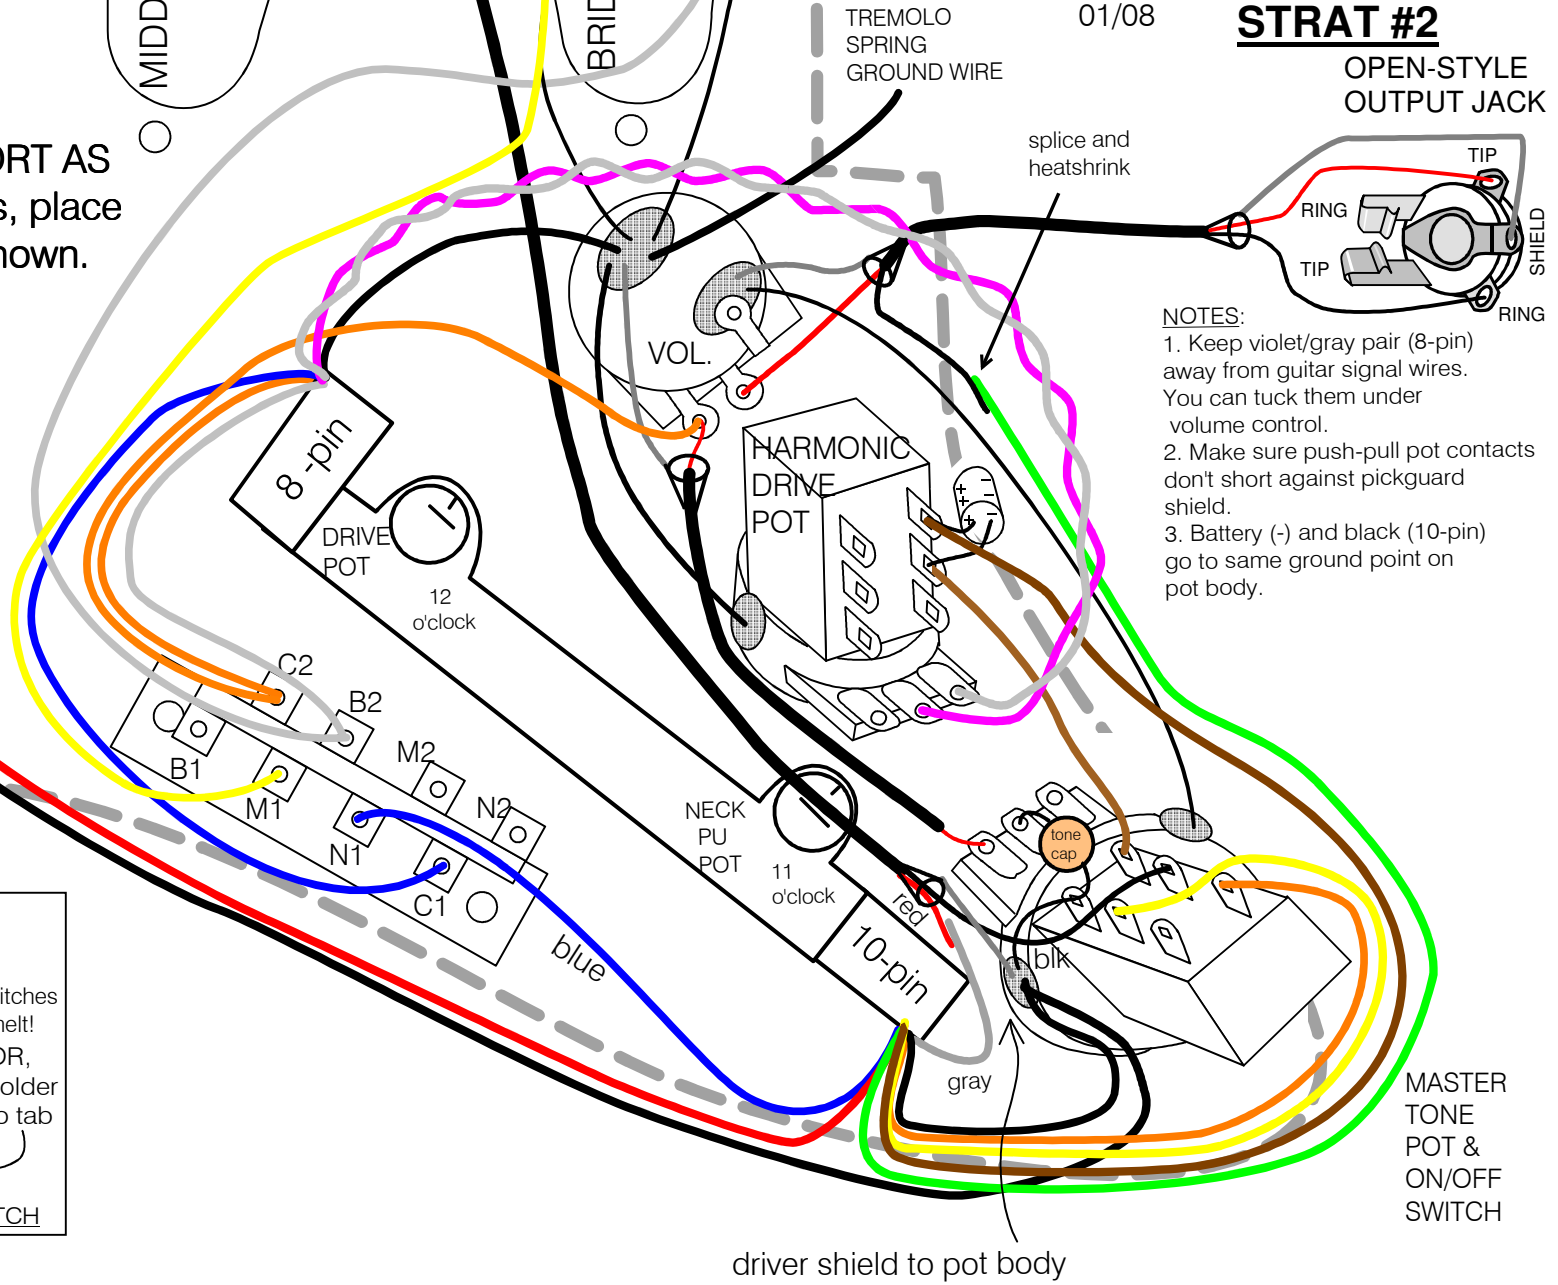

- NOTES:
1. Keep violet/gray pair (8-pin) away from guitar signal wires. You can tuck them under volume control.
 2. Make sure push-pull pot contacts don't short against pickguard shield.
 3. Battery (-) and black (10-pin) go to same ground point on pot body.

driver shield to pot body