

Sustainiac® STEALTH PRO STRAT® installation toggle switch and board placement diagram. The board lies on the cavity bottom, with components facing up. 10-15 **STRAT #15**

Sustainiac circuit board lies in bottom of cavity, smooth side toward bottom. The wire routing is shown as if the circuit board is "invisible".

Driver black wire to middle terminal, in between brown/orange


Bridge PU to "B2"

Middle PU to "M1"

Make sure all ground connections are made.

- 1-bridge or tremolo
- 2-pickups (shield and "low-side")
- 1-driver shield.

OPEN-STYLE OUTPUT JACK

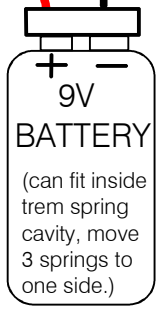

***Battery black wire and black wire, 10-pin connector to SAME POINT